

*airlette*<sup>®</sup>

# “LOUVER VENT”

(Model BLV-1)


Self-Sealing / Adhesive

## INSTALLATION INSTRUCTIONS

For Plastic and/or Synthetic Material Coverings


1. Select an area on covering for ventilator installation.

(Note: For best result locate vent at the highest section of covering. **AVOID SEAMS, FOLDS, or DEEP PERMANENT CREASES.**)

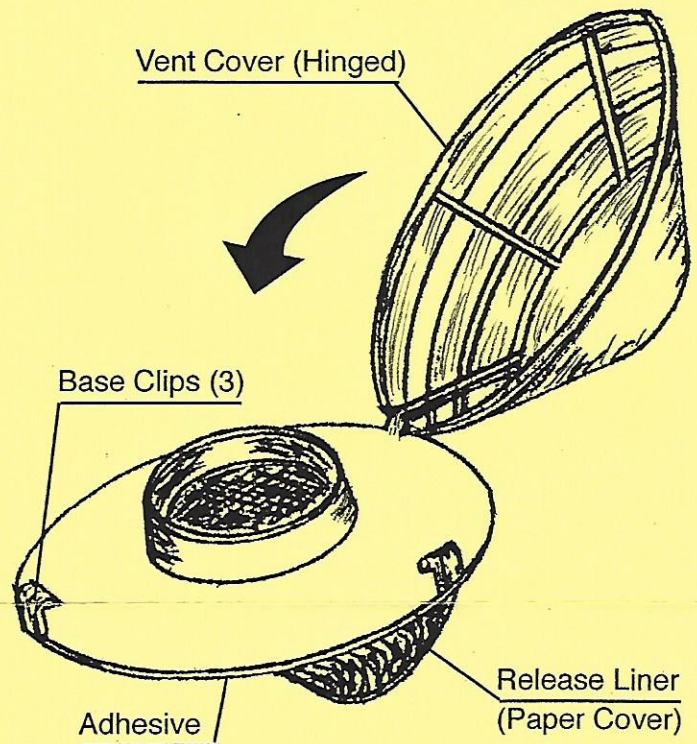


••• **SPECIAL NOTE** ••• Selected surface area should be **CLEAN, DRY, and FREE OF GREASE OR OIL.** Ambient/air temperature should be above 50 degrees Fahrenheit (10 degrees Celsius.) (Use heat gun to warm surfaces if ambient temperature is below 50 F.)


2. Remove **Release Liner** (paper cover) from adhesive section of vent (located on underside of **BASE**) and place the **BASE** onto the selected mounting area. Press gently into place.

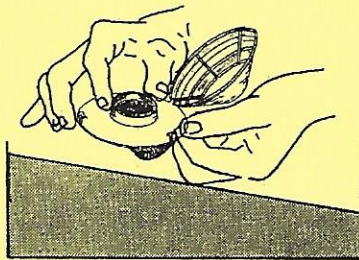


4. Press vent firmly into place by applying finger pressure to both sides of **BASE** perimeter.

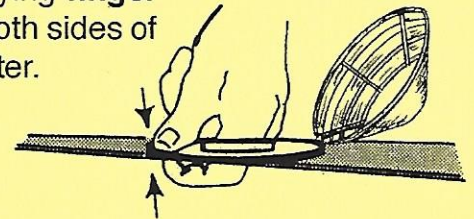

3. Cut through covering material at the center of the vent, and remove all covering material from center of vent opening.

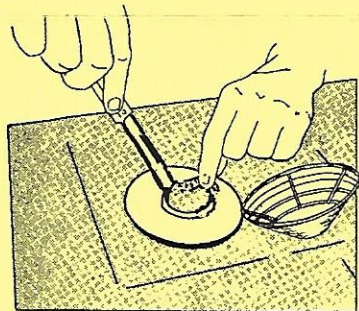

5. Lock vent **COVER** onto **BASE** by pressing **COVER** (down) firmly onto **BASE** until all (3) **Base-Clips** are firmly attached over 'flange-area' of vent cover.

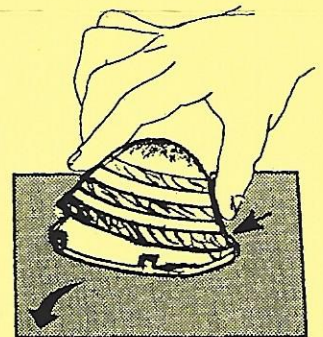

*airlette*<sup>®</sup> MANUFACTURING CORPORATION

P.O. Box 3494 • Lantana, FL 33465-3494

Phone (561) 585-8885 • Fax (561) 585-0632 • E-Mail: Airlette@msn.com

VISIT OUR WEB SITE FOR MORE INFORMATION! Web Site: [www.airlette.com](http://www.airlette.com)