




(BLV-1) LOUVER VENT


For Plastic and/or Synthetic Material Coverings

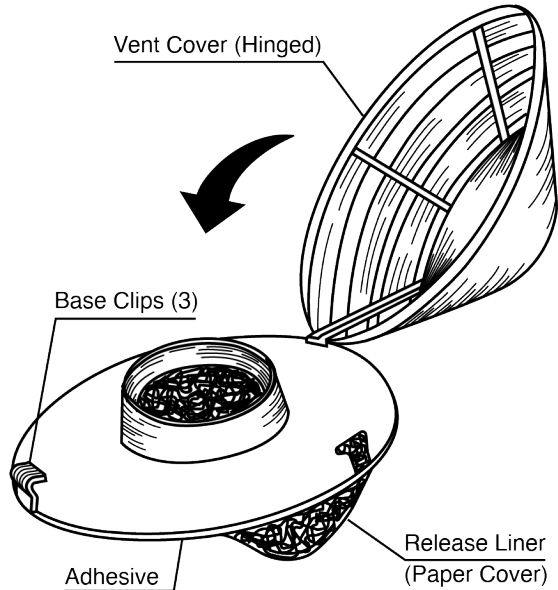


1. Select an area on covering for ventilator installation.

~~ SPECIAL NOTE ~~


For best results, locate vent at the highest section careful to avoid seams, folds or deep creases. Surface should be smooth, clean, dry and free of grease or oil. Ambient air temperature should be above 50°F (10°C). Use heat gun to warm surfaces if ambient temperature is below 50°F.

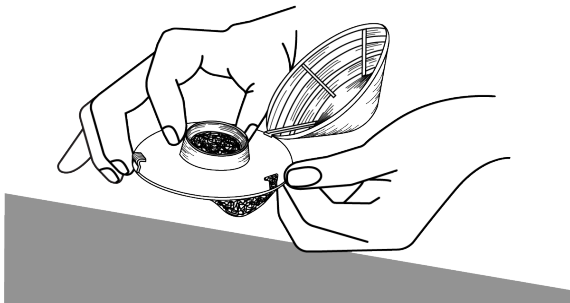


2. Remove paper cover (located on underside of Base) and place the Base onto the selected mounting area. Press gently in place.

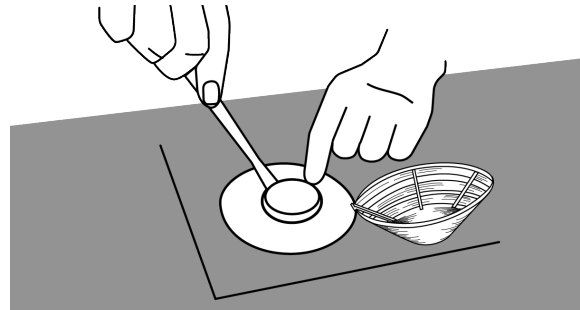

3. Cut through covering material at the center of the vent, and remove all covering material from the center of Vent opening.

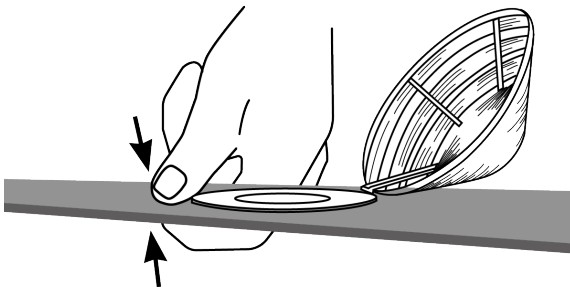

4. Press vent firmly into place by applying finger pressure to both sides of BASE perimeter.

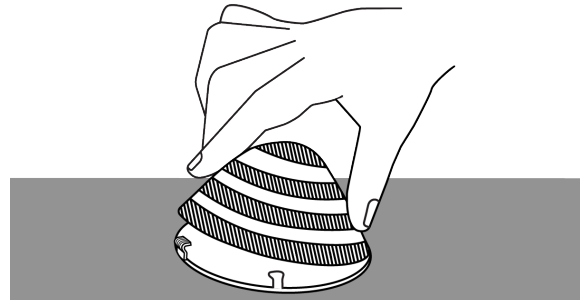

5. Lock vent COVER onto BASE by pressing COVER down firmly onto BASE until all (3) Base-Clips are firmly attached over flanged area of vent cover.