




INSTALLATION INSTRUCTIONS

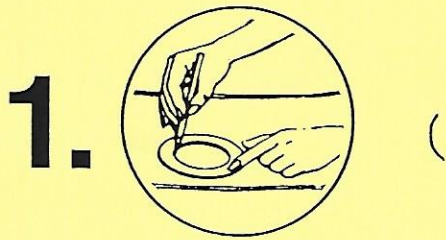


Scribe/Trace the inner circle of the SNAP-RING onto selected area (Note: For best results locate at the highest angular section of the covering... AVOID SEAMS.)

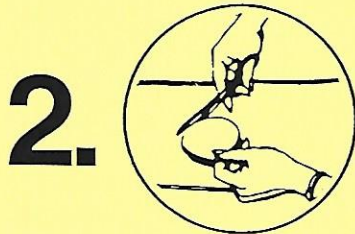

Remove SNAP-RING and cut 'scribed' circle through material.

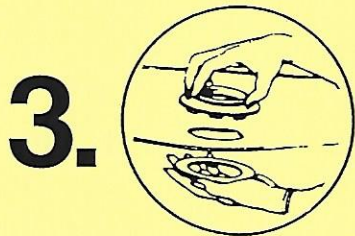


Insert "Pronged" section of Collar through hole in material. While holding Collar inserted through hole... push the Snap-Ring (from underside) onto the flexible pronged section of Collar until locked in place. All prongs (6) should be locked into Snap-Ring for proper securement.

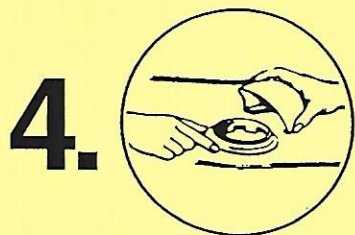

To attach HOOD - push/slip Hood under flange section of Collar. Push forward (while holding front section of unit) until two "teeth" on back edge of HOOD lock over ridge located on Collar.

Airlette[®] Deluxe "Snap-in" Vent

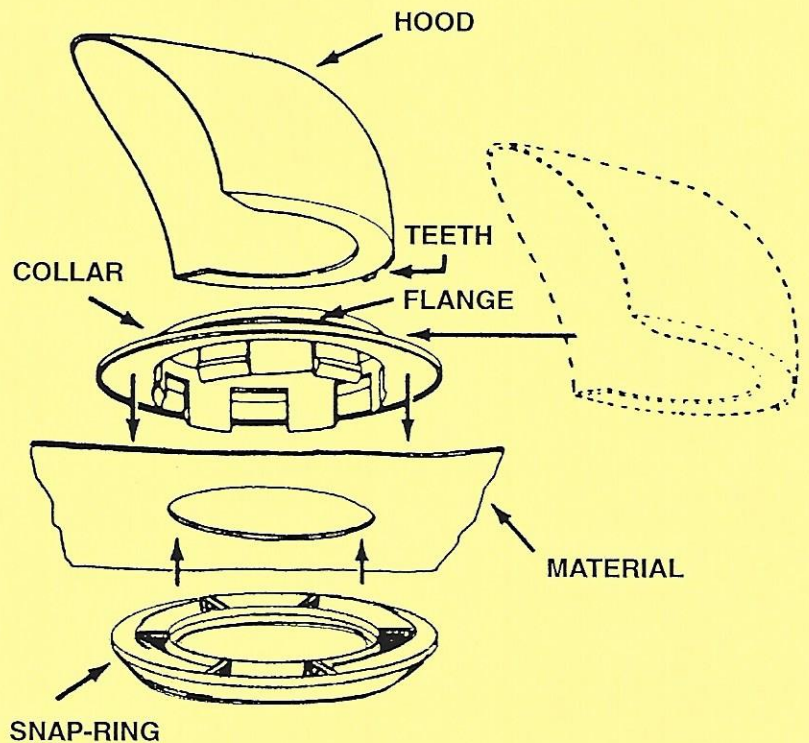

For trailer type covers, point the Hood opening opposite to the direction of towing vehicle during travel for best venting effect.

TO REMOVE HOOD, press down on front section of HOOD to lift two teeth on back edge over sharp ridge - slide HOOD off.

"UNCONDITIONALLY GUARANTEED"
MADE IN THE U.S.A.

Airlette[®] MANUFACTURING
CORPORATION

P.O. Box 3494 • Lantana, FL 33465-3494
Phone (561) 585-8885 • Fax (561) 585-0632
E-Mail: Airlette@msn.com

VISIT OUR WEB SITE FOR MORE INFORMATION! Web Site: www.airlette.com