

airlette®

“STICK - ON” VENTILATOR



Self - Sealing / Adhesive

INSTALLATION INSTRUCTIONS

For “Shrink - Film” Covering Application


1. Select an area on shrink-film covering for ventilator installation, after film covering has been heated, shrunk, and sealed.

(Note: For best result locate vent at the highest angular section of covering . . . **AVOID SEAMS, FOLDS, or DEEP PERMANENT CREASES**).

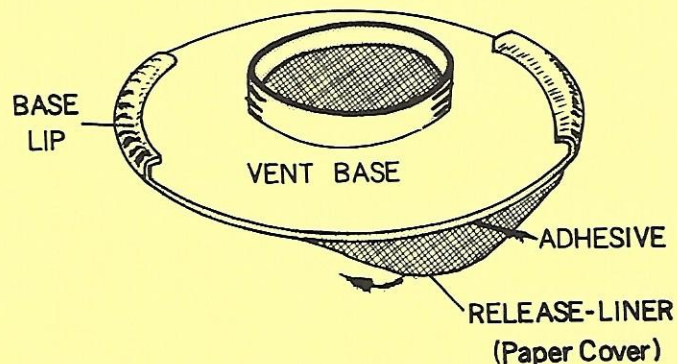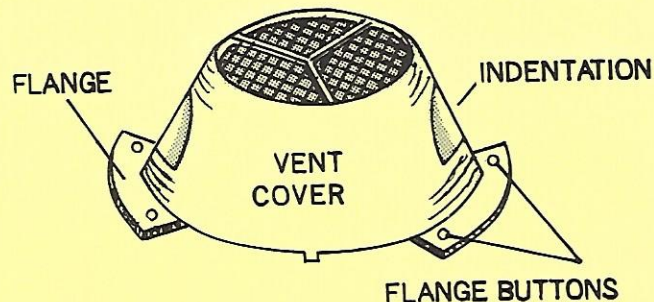


***** SPECIAL NOTE ***** Selected surface area should be **CLEAN, DRY, and FREE OF GREASE OR OIL**. Ambient/air temperature should be **above 50 degrees Fahrenheit (10 degrees Celsius)**.


***(USE HEAT GUN TO WARM SURFACES IF AMBIENT / SURFACE TEMP. IS BELOW 50°F).**

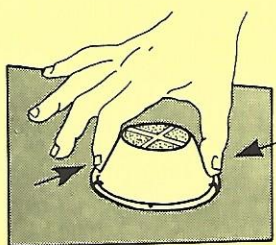

2. Remove vent **COVER** by applying pressure at two (2) indented areas (press inward . . . toward center), until **FLANGE** is clear of **BASE LIP**.

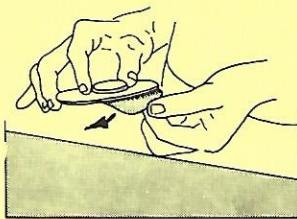


3. Remove **RELEASE-LINER** (paper cover) from adhesive section of vent (located on underside of **BASE**), and place **BASE** onto selected mounting area. Press gently into place.

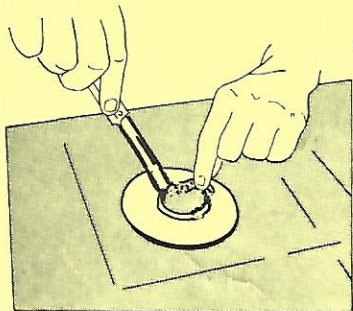


4. Cut through shrink-film covering material at center of vent. Remove all covering material from vent opening.

5. Press vent firmly into place by applying pressure to both sides of Base perimeter.

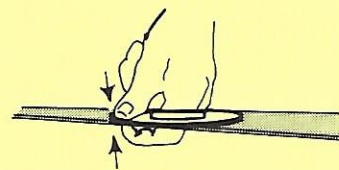

6. Replace vent **COVER** by applying pressure at two (2) indented areas (press inward . . . toward center), and place both **FLANGE** areas **UNDER** Base Lips. (Note: Two (2) “Buttons” on **FLANGE** should be located **OUTSIDE** of **BASE LIPS**).

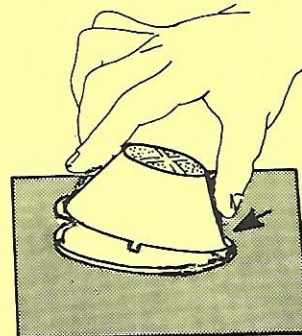

airlette®

MANUFACTURING
CORPORATION

POST OFFICE BOX 3494 • LANTANA, FLORIDA 33465 - U.S.A.
PHONE (407) 585-8885 • FAX (407) 585-0632